


# Vestax

Professional Mixing Controller

## PMC-07Pro

取扱説明書

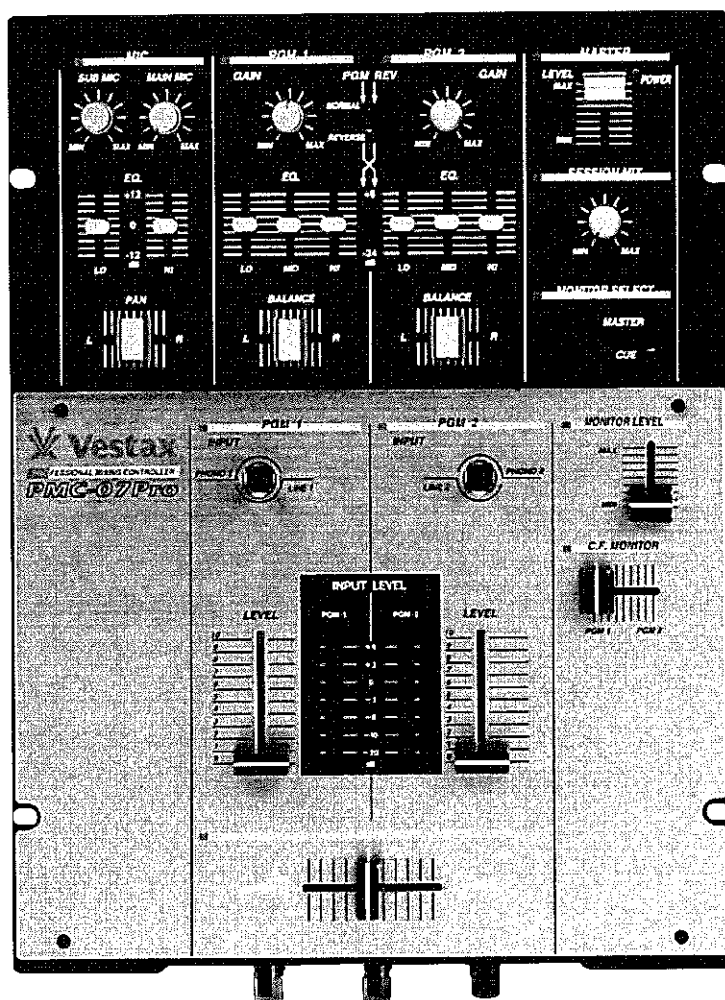

### ベスタクス株式会社

〒154-0023 東京都世田谷区若林1-18-6

電話 03-3412-7011 ファックス03-3412-7013

Printed in JAPAN

# CONGRATULATIONS!

Thank you for purchasing VESTAX PMC-07PRO, Professional Mixing Controller. Please read this owners manual carefully before you start to use your mixer, so that you will fully understand all of the special features and enjoy the full use of the product.

## IMPORTANT

To prevent electric shock, do not remove the cover. No user serviceable parts are inside. Please refer servicing to a VESTAX Authorized Service Center. Always disconnect all equipment from the main supply when disconnecting or reconnecting signal leads. The power cord should be connected last. Make sure that the power switch is off when connecting the power cord. Disconnect from AC supply when equipment is not used for extended amount of time.

## WARRANTY


The warranty might vary from country to country. Each distributor has their own warranty system in accordance with the country or state regulations or laws. VESTAX observes the manufacturing country's regulations.

## PRECAUTIONS

- \* Humidity and dust  
Avoid use where there is high humidity and dust which may cause damage to internal parts.
- \* Temperature  
Avoid use in hot, (over 35°C) and cold, (below 5°C) locations. Keep the unit away from extreme direct heat such as direct sunlight, heating radiators, or closed vehicles.
- \* Keep away from liquids  
Do not stand cans containing liquids on or near the equipment. If liquid enters equipment, disconnect the power cord from the power outlet immediately.

## FEATURES

- The Vestax's invention, crossfader reverse switch and curve control knob are provided not only on the crossfader, but on also input faders. This feature allows DJs to play in different new styles. All of the faders are "photo coupler" controlled which gives much longer life and quicker response to the faders.
- The world's first program reverse switch reverses the whole program 1 and 2. This feature is provided for battle situation preventing connection change for any mixing styles.
- 3band EQ with +6 to -24dB range is provided on each program. This powerful EQ enables DJs to create not only equalization but also band elimination.
- Master / Cue select switch is provided on monitor section. This switch enables selection of the monitor source from cue signal and master output signal.
- Session input is provided for chain connection when DJs perform in group session.
- 1/4" phone jack (TRS balanced) is equipped on master output. The connection is more durable and accurate.

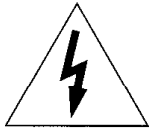

## CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



**CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK)  
NO USER-SERVICEABLE PARTS INSIDE  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION :** TO PREVENT ELECTRIC SHOCK, MATCH BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

**ATTENTION :** POUR EVITER LES CHOCES ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU' AU FOND


## IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

**WARNING :** When using electric products, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Do not use this product near water - for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
3. This product should be used only with a cart or stand that is recommended by the manufacturer.
4. This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you should consult an audiologist.
5. The product should be located or position does not interfere with its proper ventilation.
6. The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
7. The product should be connected to a power supply only of the type described in operating instructions or as marked on the product.
8. The power - supply cord of the product should be unplugged from the outlet when left unused for a long period of time.
9. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. The product should be serviced by qualified service personnel when;
  - A. The power - supply cord or the plug has been damaged;
  - B. Objects have fallen, or liquid has been spilled into the product ; or
  - C. The product has been exposed to rain ; or
  - D. The product does not appear to operate normally or exhibits a marked change in performance ; or
  - E. The product has been dropped, or the enclosure damaged.
11. Do not attempt to service the product beyond that described in the use - maintenance instructions. All other servicing should be referred to qualified service personnel.

# 各部の名称とはたらき

## トップパネル

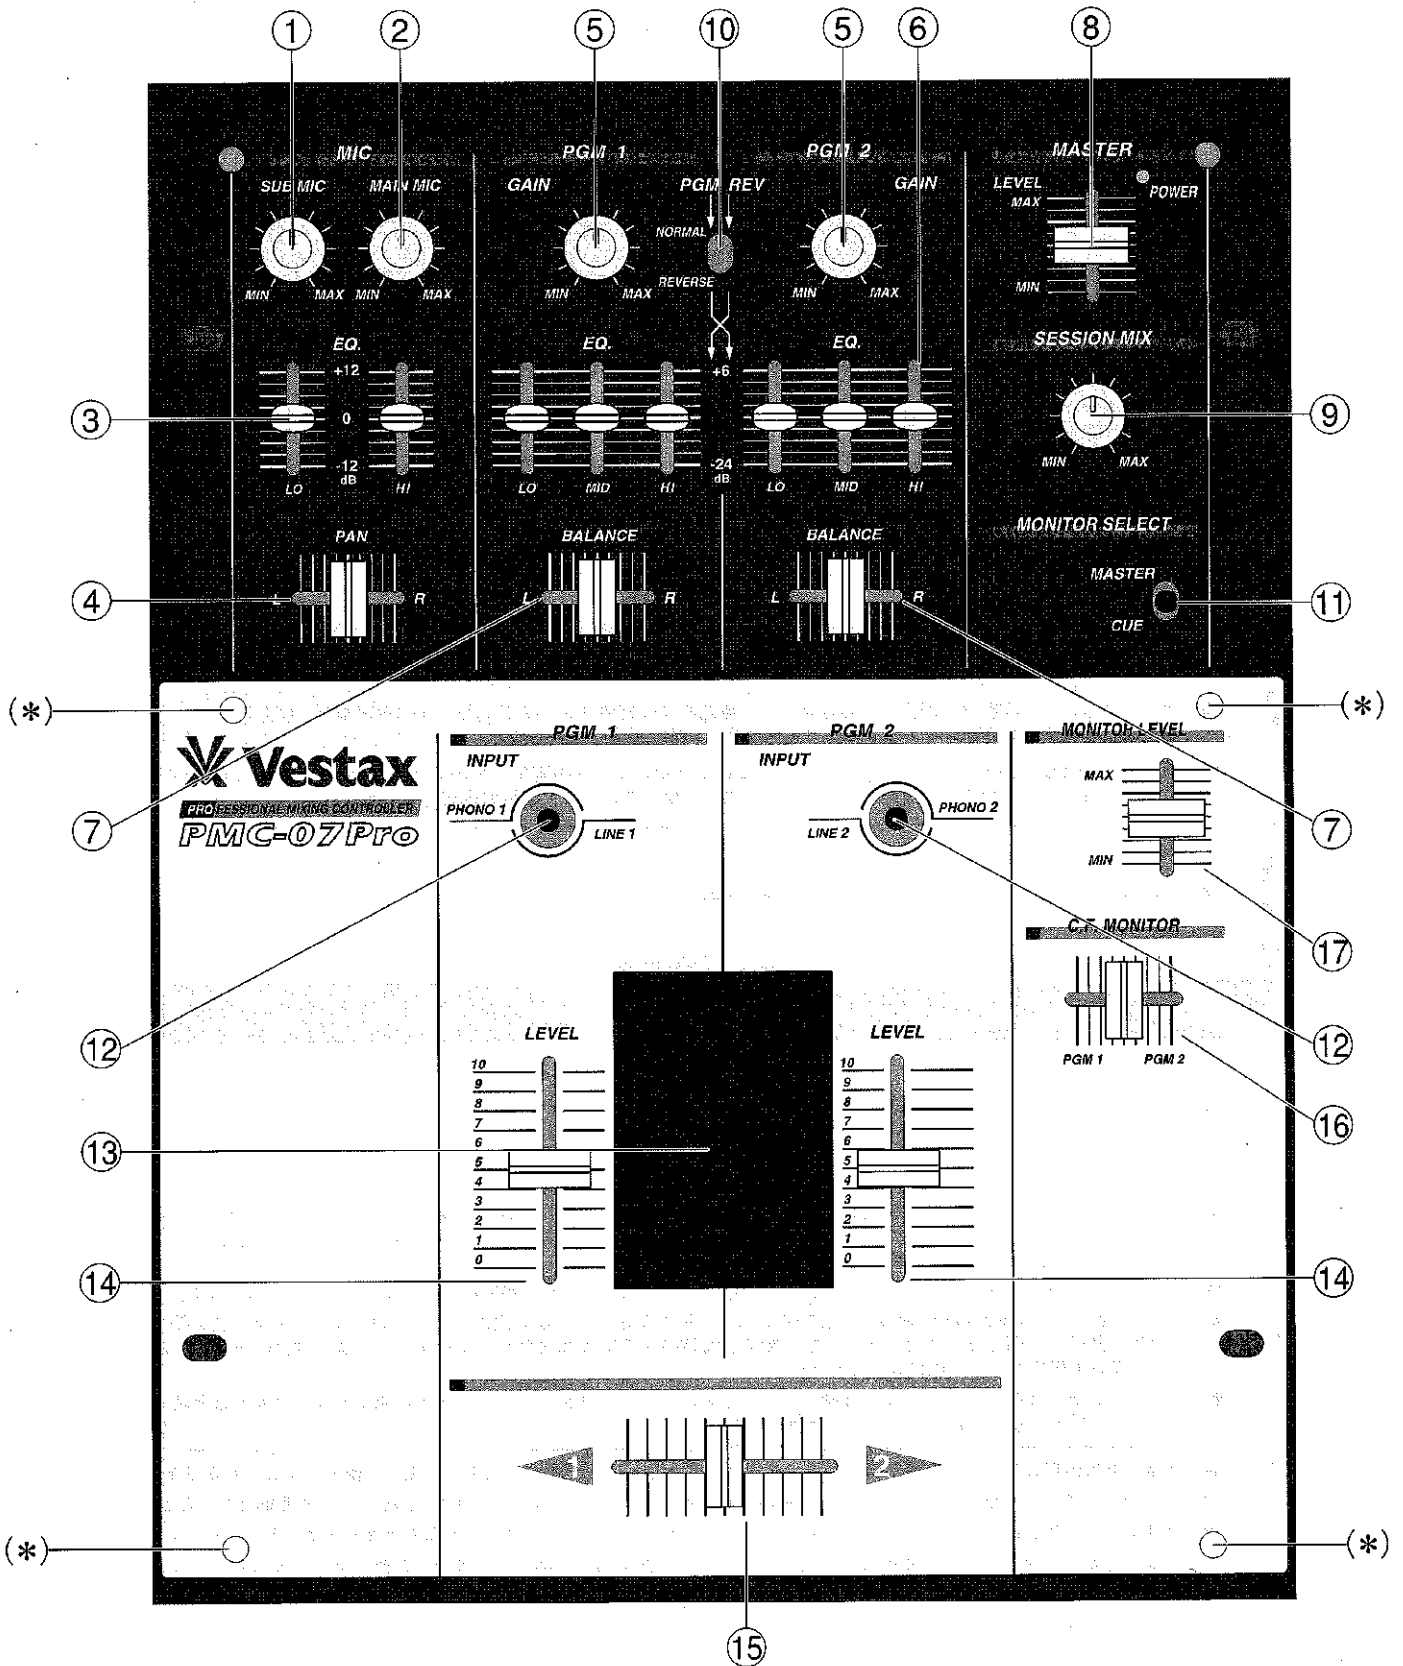

## FRONT SECTION

### 1, SUB MIC LEVEL

Adjusts the input level from SUB MIC JACK. (32)

### 2, MAIN MIC LEVEL

Adjusts the input level from MAIN MIC JACK. (31)

### 3, MIC EQUALIZER

Adjusts the HI and LO frequencies for both of MAIN and SUB MIC.

### 4, MIC PAN VOLUME

Moving this knob to the right causes the mic signal to be sent to right channel, moving to the left causes the mic signal to be sent to left channel.

### 5, GAIN VOLUME

Adjusts the input level of each channel. Set INPUT FADER (14) to 7-8 position, this volume should be adjusted so that INPUT LEVEL METER (13) shows about 0dB.

### 6, PROGRAM EQUALIZER

Adjusts the HI and MID, LO frequencies for each PROGRAM channel.

### 7, BALANCE CONTROL

Adjusts the stereo balance for each PGM channel. This volume can also be used for adjusting the unbalanced stereo image caused by strong Anti-Skating setting.

### 8, MASTER FADER

Adjusts the signal level outputs from MASTER OUT JACK. (25,26)

### 9, SESSION IN VOLUME

Adjusts the signal level from SESSION IN JACK (27)

### 10, PROGRAM REVERSE SWITCH

When this switch is turned on, the signals connected PGM1 and PGM2 will be reversed.

### 11, MONITOR SELECT SWITCH

The switch selects the way of monitoring from followings.

CUE.....It allows you to hear input signal of PGM1, PGM2 selected by CF MONITOR (16).

MASTER.....It allows you to hear the signal of MASTER OUT. (25,26)

### 12, INPUT SELECT SWITCH

This switch is used to select the input (LINE or PHONO) to be sent to each PGM channel. It can also be used for TRANSFORMER SCRATCH. Its operational direction is selectable from vertical to horizontal.

## <HOW TO CHANGE DIRECTION>

- Remove each fader knobs and 4 screws (\*) which fix the top panel.
- Remove the top panel.
- Remove the screws on switch panel (\*\*) and change the direction. Then re-fix it with the screws.
- Place the top panel and fix it with 4 screws. Then re-place the fader knob.

### 13, INPUT LEVEL METER


The LED level meters indicates the signal level of each PGM channel.

### 14, INPUT FADER

This fader is used to adjust input level of each PGM channel.

This is a detachable fader for ease of replacement. Replace with JF-07PRO when it is worn out.

Please see CROSSFADER section for how to replace it.

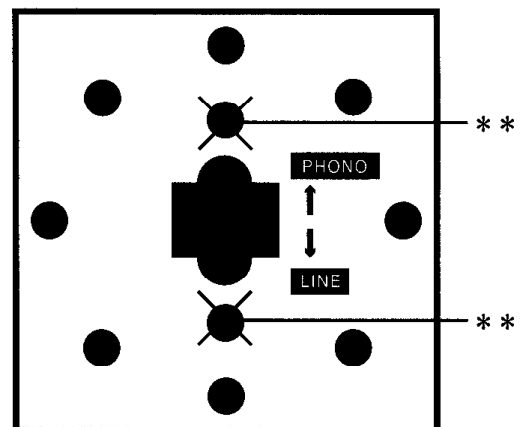

## < CAUTION >

The CF-05 PRO is used for cross fader with the  
PMC-07PRO.

## 15, CROSS FADER

This fader mixes the signals of PGM1 and PGM2. When the crossfader is set in the center position, both PGM1 and PGM2 can be heard. This is a detachable fader for ease of replacement. Please replace with CF-05PRO when it is worn out.

### <HOW TO REPLACE CROSSFADER>


- Remove each fader knobs and 4 screws (\*) which fix the top panel.
- Remove the top panel.
- Carefully remove the multicable connector from fader unit.
- Insert the connector into the new fader unit.
- Re-place the fader unit and fix it with screws.
- Re-place the top panel and fix it with 4 screws. Then re-place each fader knobs.

## 16, CROSS FADER MONITOR

This fader selects PGM for monitoring in the same way as the crossfader. This signal for monitoring comes from pre-fader.

## 17, MONITOR LEVEL

Adjust the headphone monitor output level.

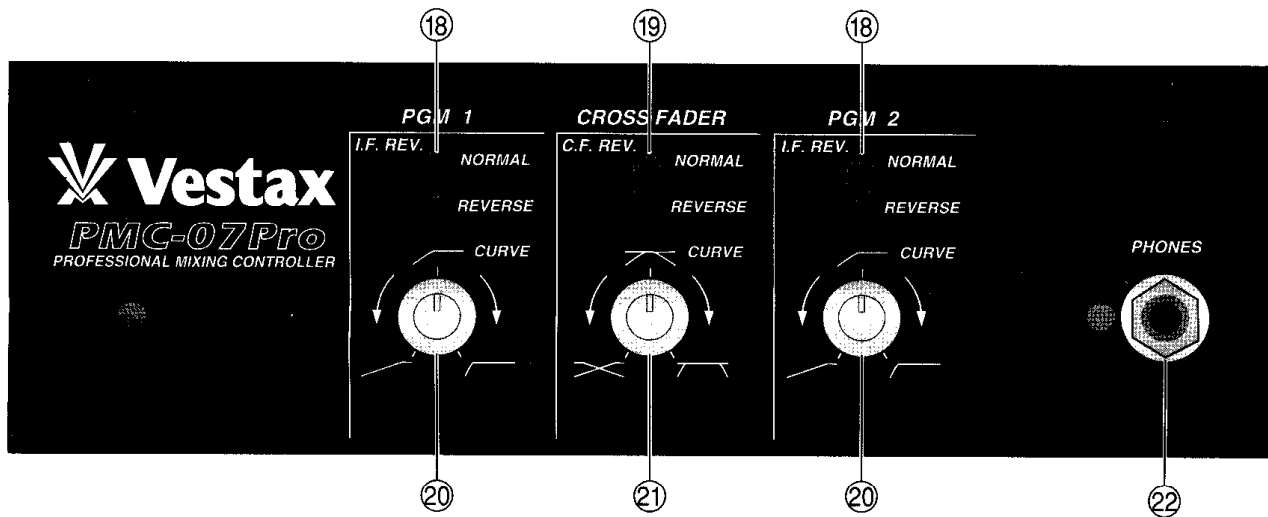

## FADER SETTING SECTION

### 18, INPUT FADER REVERSE SWITCH

Usually, as input fader is moved up, the volume increases. When this switch is turned on, the fader action is reversed and the volume decreases as the fader moved up.

### 19, CROSS FADER REVERSE SWITCH

Usually, as crossfader is moved the left, PGM 1 sounds are output. When this switch is turned on the output signal are switched from PGM 2 and PGM 1 instantly. Therefore as a crossfader is moved to the left, PGM 2 sounds is output.

### 20, IF CURVE SELECT VOLUME

Adjusts the input fader curve. Clockwise rotation gives a steep change of volume. Counterclockwise rotation gives a gentle change. ( Refer to fig.2 INPUT FADER CURVE )

### 21, CF CURVE SELECT VOLUME

Adjusts the crossfader curve. Clockwise rotation gives a steep crossfade. Counterclockwise rotation gives a gentle crossfade. ( Refer to fig.3 CROSS FADER CURVE )

### 22, HEADPHONE JACK

When listening with stereo headphones, connect them to this jack.



## INPUT / OUTPUT SECTION

- 23, POWER SWITCH  
LED located on front panel is lit when the power is on.
- 24, AC POWER JACK
- 25, MASTER OUT JACK (1/4 inch TRS balanced)  
Tip..... HOT  
Ring..... COLD  
Sleeve..... GROUND ( Refer to fig.1 )
- 26, MASTER OUT JACK (RCA PIN JACK)  
This jack is -4dBm unbalanced out.
- 27, SESSION IN JACK  
"Session in jack" for chain connect of another PMC-07PRO. Please connect to master out jack (RCA) of another 07pro or equivalent mixer. ( Refer to fig.4 )
- 28, LINE INPUT JACK  
Input connectors for line level equipment such as CD players, tape decks ,DAT, MD etc.
- 29, PHONO INPUT JACK  
Input jack for turntables. Connect turntables equipped with the MM cartridges only.
- 30, GROUND TERMINAL  
Connect ground lead of the turntable. This helps to reduce noise and hum.
- 31, MAIN MIC INPUT JACK  
Input jack for a main microphone.
- 32, SUB MIC INPUT JACK  
Input jack for a sub microphone.

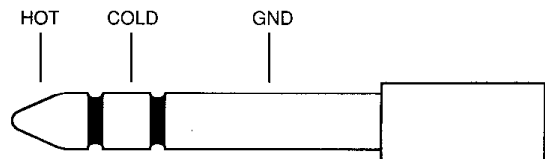


fig.1 T.R.S. JACK

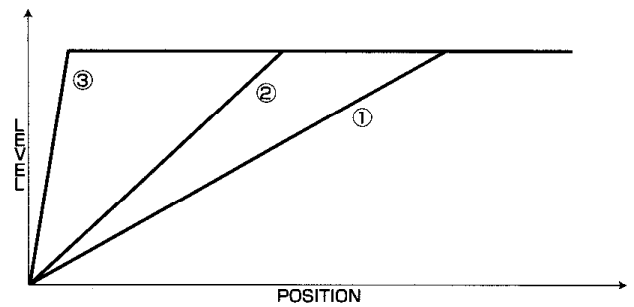


fig.2 INPUT FADER CURVE


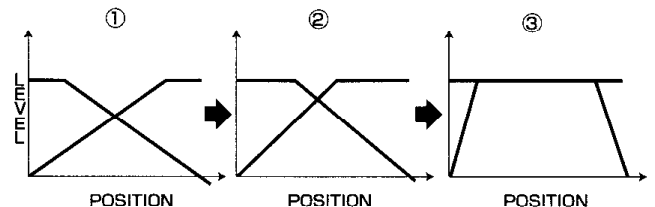


fig.3 CROSS FADER CURVE

カスケード接続の例

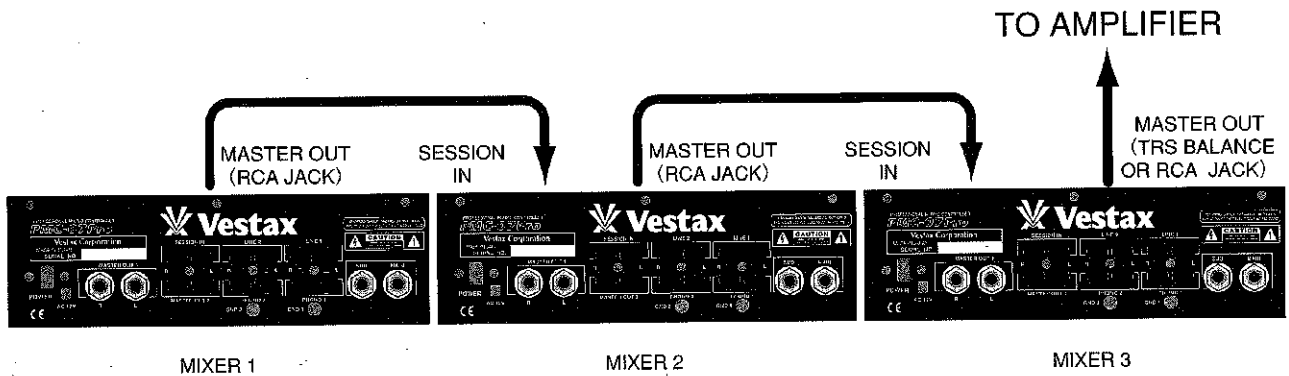

SPECIFICATION

|                    |                               | NOMINAL INPUT LEVEL   | MAXIMUM INPUT LEVEL           | IMPEDANCE      |             |
|--------------------|-------------------------------|-----------------------|-------------------------------|----------------|-------------|
| INPUT SECTION      | MAIN/SUB MIC (1/4 'PHONEJACK) | -50dBv                | -20dBv                        | 3.3kΩ          |             |
|                    | PHONO 1~2L/R (RCA PIN JACK)   | -42dBv                | -22dB v                       | 56kΩ           |             |
|                    | LINE 1~2L/R (RCA PIN JACK)    | -10dBv                | 14dBv                         | 20kΩ           |             |
|                    | SESSION IN (RCA PIN JACK)     | -10dBv                | 8dBv                          | 10kΩ           |             |
|                    |                               | RATED INPUT           | MAXIMUM INPUT                 | LOAD IMPEDANCE |             |
| OUTPUT SECTION     | MASTER OUT L/R (TRS BALANCE)  |                       | -60dBv                        | 16dBv          | 2kΩ or more |
|                    | MASTER OUT L/R (RCA PIN JACK) |                       | -53dBv                        | 9dBv           | 2kΩ or more |
|                    | HEAD PHONE (1/4' PHONE JACK)  |                       |                               | 130mw          | 4Ω          |
| FREQUENCY RESPONSE | MIC                           | 30Hz ~ 20kHz (±0.5dB) | CROSSFADER CROSSTALK < -100dB |                |             |
|                    | LINE                          | 20Hz ~ 20kHz (±0.5dB) | CHANNEL CROSSTALK < -65dB     |                |             |
| S/N RATIO          | MIC                           | 80dB 以上               | POWER SUPPLY AC12V 1000mA     |                |             |
|                    | LINE                          | 90dB 以上               | DIMENSION (W×H×D) 360×262×105 |                |             |
| FADER ATTENUATION  | 70dB以上                        |                       | WEIGHT 4kg                    |                |             |
|                    |                               |                       |                               |                |             |





Vestax Corporation 1-18-6 Wakabayashi, Setagaya-ku, Tokyo 154-0023 Japan  
Telephone : 81-(0)3-3412-7011 Fax : 81-(0)3-3412-7013. www.vestax.jp

***This is to certify that the product subsequently referred to  
was designed and manufactured in conformity with the  
following EC directives;  
89/336/EEC (EMC)  
73/23/EEC (LVD)***

**Model type :** Professional Mixing Controller

**Model Description :** Professional Performance DJ Mixer

**Model Number :** PMC-07Pro

**Applicable Standards :** EN55013:1990+A12:1994+A13:1996 Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment (including amendments A12:1994 and A13:1996) (CISPR13:1975/Amdt1:1983, modified)  
EN50082-1:1997 Electromagnetic compatibility-Generic immunity standard Part1:Residential, commercial and light industry

**Date :** Wednesday, December 19, 2001

**Place of Issue :** Vestax Corporation, 1-18-6 Wakabayashi, Setagaya-ku,  
Tokyo 154-0023 Japan

**Manufacturers Authorized  
Signature :**

**Function of Signatory :**

Masaaki Shiomi

Director